



# **IAR-120 series**

## **IEEE 802.11 b/g Access Point Router**

# **User's Manual**

**Version 1.2**

**March, 2011**

[www.oring-networking.com](http://www.oring-networking.com)

## **COPYRIGHT NOTICE**

Copyright © 2011 ORing Industrial Networking Corp.

All rights reserved.

No part of this publication may be reproduced in any form without the prior written consent of ORing Industrial Networking Corp.

## **TRADEMARKS**



is a registered trademark of ORing Industrial Networking Corp.

All other trademarks belong to their respective owners.

## **REGULATORY COMPLIANCE STATEMENT**

Product(s) associated with this publication complies/comply with all applicable regulations.

Please refer to the Technical Specifications section for more details.

## **WARRANTY**

ORing warrants that all ORing products are free from defects in material and workmanship for a specified warranty period from the invoice date (5 years for most products). ORing will repair or replace products found by ORing to be defective within this warranty period, with shipment expenses apportioned by ORing and the distributor. This warranty does not cover product modifications or repairs done by persons other than ORing-approved personnel, and this warranty does not apply to ORing products that are misused, abused, improperly installed, or damaged by accidents.

Please refer to the Technical Specifications section for the actual warranty period(s) of the product(s) associated with this publication.

## **DISCLAIMER**

Information in this publication is intended to be accurate. ORing shall not be responsible for its use or infringements on third-parties as a result of its use. There may occasionally be unintentional errors on this publication. ORing reserves the right to revise the contents of this publication without notice.

## **CONTACT INFORMATION**

**ORing Industrial Networking Corp.**

3F., No.542-2, JhongJheng Rd., Sindian District, New Taipei City 23148, Taiwan (R.O.C.)

Tel: +886-2-2218-1066 // Fax: +886-2-2218-1014

Website: [www.oring-networking.com](http://www.oring-networking.com)

**Technical Support**

E-mail: [support@oring-networking.com](mailto:support@oring-networking.com)

**Sales Contact**

E-mail: [sales@oring-networking.com](mailto:sales@oring-networking.com) (Headquarters)

[sales@oring-networking.com.cn](mailto:sales@oring-networking.com.cn) (China)

# Tables of Content

<b>Getting to Know your Wireless AP Router .....</b>	<b>1</b>
1.1 Overview .....	1
1.2 Software Features .....	1
1.3 Hardware Features .....	2
<b>Hardware Installation .....</b>	<b>3</b>
2.1 Installation Router on DIN-Rail .....	3
2.2 Wall Mounting Installation .....	4
<b>Hardware Overview .....</b>	<b>6</b>
3.1 Front Panel .....	6
3.2 Front Panel LEDs .....	8
3.3 Bottom Panel .....	9
3.4 Rear Panel .....	9
<b>Cables and Antenna .....</b>	<b>10</b>
4.1 Ethernet Cables .....	10
4.2 Wireless Antenna .....	11
<b>Management Interface .....</b>	<b>12</b>
5.1 First-time Installation .....	12
5.2 Configure the Wireless Router .....	15
5.3 Main Interface .....	15
5.3.1 Basic Setting .....	16
WAN .....	16
LAN .....	21
DHCP .....	22
Wireless .....	24
5.3.2 Advanced Setting .....	28
Wireless .....	28
NAT Setting .....	31
Security Setting .....	35
VPN Setting .....	36
Routing Protocol (Routing Setting) .....	43
Notification .....	46
Miscellaneous (DDNS) .....	48
5.3.3 System Tools .....	49
Date & Time .....	49
Login Setting .....	50
Router Restart .....	51

Firmware Upgrade .....	51
Save/Restore Configurations.....	52
Miscellaneous (Ping).....	53
5.3.4 System Status.....	54
System Info .....	54
System Log .....	54
Traffic Statistics .....	55
Wired/Wireless Clients.....	55
<b>Technical Specifications .....</b>	<b>56</b>

# **Getting to Know your Wireless AP Router**

## **1.1 Overview**

The ORing IAR-120 / 120+ wireless AP router is designed to operate in industrial environment. The AP router provides a fast and effective ways of communicating to the internet over wired or wireless LAN. In addition, multiple types of WAN connection are provided for easily access to the internet.

The ORing IAR-120 / 120+ wireless AP router is IEEE802.11g high-performance wireless equipment which is also compatible with IEEE802.11b equipment. It is capable of data transfer rates up to 54Mbps. It is easy for you to extend the reach and number of computers connected to your wireless network.

With the USB 3G WAN connection, the ORing IAR-120 / 120+ wireless AP router can be mounted in harsh environment easily to provide internet access anytime and anywhere.

The ORing IAR-120 / 120+ wireless AP router's VPN capability creates encrypted "Virtual Tunnels" through the internet, allowing remote or traveling users for secured connection with the network in your office.



## **1.2 Software Features**

- Intuitive Web-based management user interface for simply and easily operation.
- USB connectivity providing Internet access via the USB to RS232 convertor + modem or 3G HSDPA module (HUAWEI E220) directly.
- Functions of firewall provides many security features such as blocking attacks from hacker, especially IP Spoofing, Ping flood, Ping of Death, DOS, DRDOS, Stealth Scan, ICMP flooding etc.
- Advanced firewall configuration to extend the capability and security, such as Virtual Server, Port Trigger, DMZ host, UPnP auto Forwarding, IP Filter and MAC filter.

### 1.3 Hardware Features

- Two 10/100Base-T(X) Ethernet ports for WAN / LAN connection individually.
- Fully Compliant with IEEE802.3af (Power Device at ETH2, WAN port, IAR-120+ only)
- Redundant Power Inputs: 12~48 VDC on terminal block
- Casing: IP-30
- Dimensions(W x D x H) : 52 mm(W)x 106.1 mm(D)x 144.3 mm(H)
- Operating Temperature: -10 to 55°C
- Storage Temperature: -40 to 85°C
- Operating Humidity: 5% to 95%, non-condensing

# Hardware Installation

## 2.1 Installation Router on DIN-Rail

Each Wireless AP router has a DIN-Rail kit on rear panel. The DIN-Rail kit helps AP router to fix on the DIN-Rail.

Step 1: Slant the router and mount the metal spring to DIN-Rail.




Step 2: Push the router toward the DIN-Rail until you heard a “click” sound.




## 2.2 Wall Mounting Installation

Each AP router has another installation method to fix the AP router. A wall mount panel can be found in the package. The following steps show how to mount the AP router on the wall:

Step 1: Remove DIN-Rail kit.

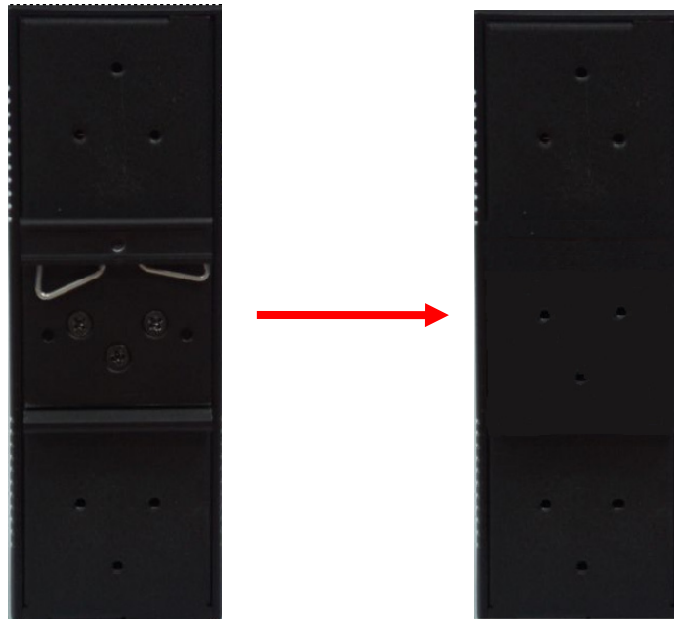


Step 2: Use 6 screws that can be found in the package to combine the wall mount panel. Just like the picture shows below:

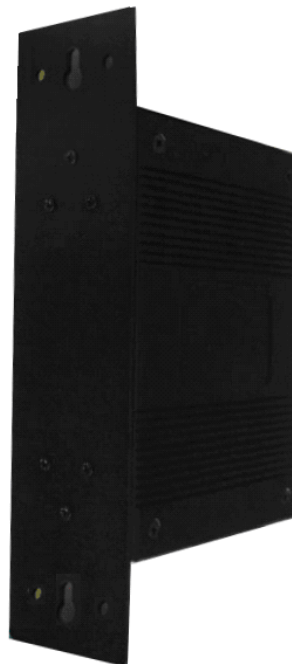



The screws specification shows in the following two pictures. In order to prevent the AP routers from any damage, the screws should not larger than the size that used in IAR-120 / 120+.

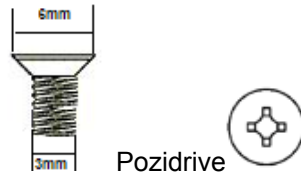


# Hardware Overview

## 3.1 Front Panel

The following table describes the labels that stick on the IAR-120 / 120+.

Port	Description
<b>10/100 RJ-45 fast Ethernet ports</b>	2 10/100Base-T(X) RJ-45 fast Ethernet ports support auto-negotiation. Default Setting : Speed: auto Duplex: auto
<b>P.O.E. PD Port</b>	ETH2 (WAN port) of IAR-120+ compliant with IEEE802.3af P.O.E. specifications and can be connected to P.O.E. switches.*
<b>ANT.</b>	Reversed SMA connector for external antenna.

**\*Note:** Please refer to the products of **ORing IPS series** for P.O.E. Ethernet switch.

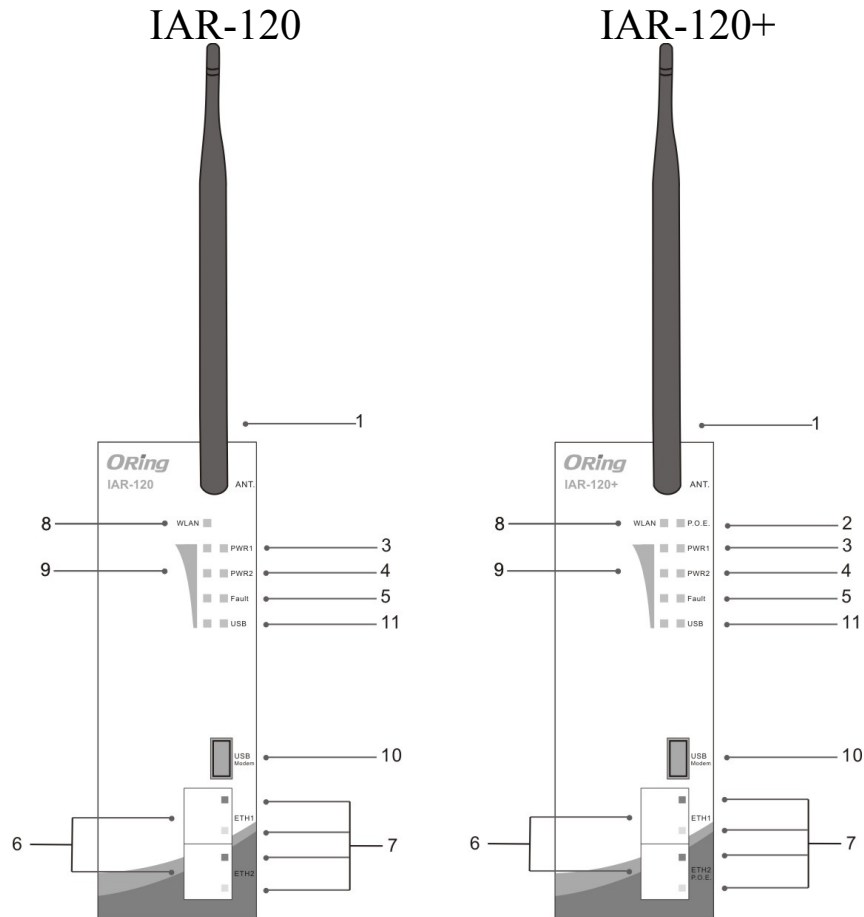

1. 2.4GHz antenna with typical 2.0dbi antenna.
2. LED for P.O.E. power and system status. When the P.O.E. power links, the green led will be light on.
3. LED for PWR1 and system status. When the PWR1 links, the green led will be light on.
4. LED for PWR2 and system status. When the PWR2 links, the green led will be light on.
5. LED for Fault indication. When the fault event occurs, the amber LED will be light on.
6. 10/100Base-T(X) Ethernet ports. ETH1 for LAN port and ETH2 for WAN port.  
(IAR-120+ contains PD function of P.O.E. at ETH2)
7. LED for Ethernet ports status.
8. LED for WLAN link/act status.
9. LED for WLAN signal strength.
10. USB port for 3G USB modem connection.
11. LED for USB modem status


## 3.2 Front Panel LEDs

LED	Color	Status	Description
System LED			
P.O.E.	Green / Red	Green On	P.O.E. power connected.
		Green blinking	Device been located
		Red blinking	Indicates an IP conflict, or DHCP or BOOTP server did not respond properly
PWR1	Green / Red	Green On	DC power 1 activated.
		Green blinking	Device been located
		Red blinking	Indicates an IP conflict, or DHCP or BOOTP server did not respond properly
PWR2	Green / Red	Green On	DC power 2 activated.
		Green blinking	Device been located
		Red blinking	Indicates an IP conflict, or DHCP or BOOTP server did not respond properly
Fault	Amber	On	Fault relay. Power failure or Port link down.
WLAN	Green	On	WLAN activated.
		Blinking	WLAN Data transmitted.
WLAN Strength	Green	On	WLAN signal strength. 1<25%, 2<50%, 3<75%, 4<100%
USB Status	Green	On	Modem Ready
		Blinking	Checking Modem status
10/100Base-T(X) Fast Ethernet ports			
10Mbps LNK/ACT	Amber	On	Port link up at 10Mbps.
		Blinking	Data transmitted.
100Mbps LNK/ACT	Green	On	Port link up at 100Mbps.
		Blinking	Data transmitted.

### 3.3 Bottom Panel

The bottom panel components of IAR-120 / 120+ are shown as below:


1. Terminal block includes: PWR1, PWR2 (12 ~ 48V DC) and Relay output (1A@24VDC).
2. Reset button. Push the bottom 3 seconds for reset; 5 seconds for factory default.

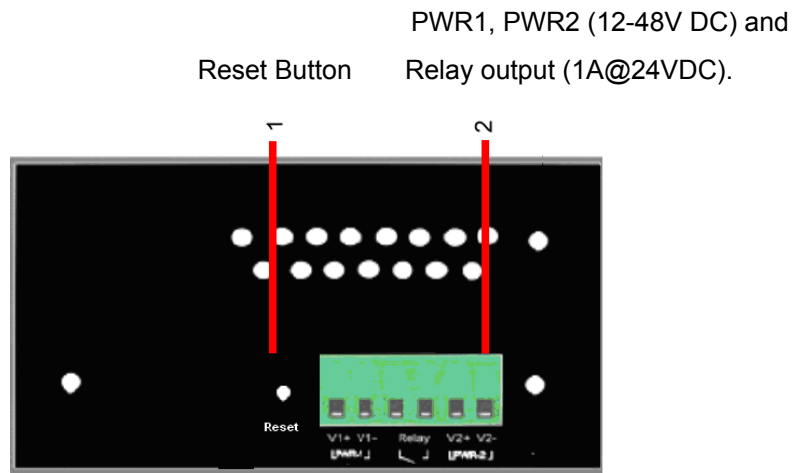

### 3.4 Rear Panel

The rear panel components of IAR-120 / 120+ are shown as below:

1. Screw holes for wall mount kit.
2. DIN-Rail kit

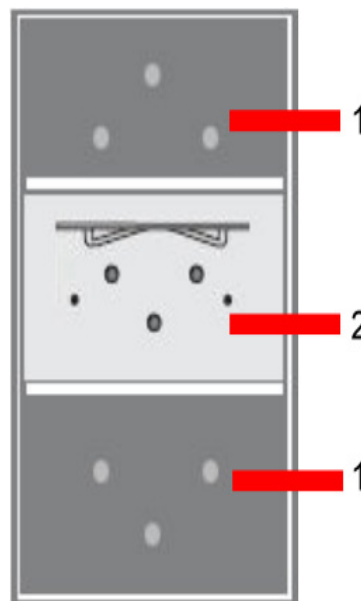

# Cables and Antenna

## 4.1 Ethernet Cables

The IAR-120 / 120+ AP routers have standard Ethernet ports. According to the link type, the routers use CAT 3, 4, 5, 5e UTP cables to connect to any other network device (PCs, servers, switches, routers, or hubs). Please refer to the following table for cable specifications.

Cable Types and Specifications

Cable	Type	Max. Length	Connector
10BASE-T	Cat. 3, 4, 5 100-ohm	UTP 100 m (328 ft)	RJ-45
100BASE-TX	Cat. 5 100-ohm UTP	UTP 100 m (328 ft)	RJ-45

### 100BASE-TX/10BASE-T Pin Assignments

With 100BASE-TX/10BASE-T cable, pins 1 and 2 are used for transmitting data, and pins 3 and 6 are used for receiving data.

RJ-45 Pin Assignments

Pin Number	Assignment
1	TD+
2	TD-
3	RD+
4	Not used
5	Not used
6	RD-
7	Not used
8	Not used

The IAR-120 / 120+ routers support auto MDI/MDI-X operation. You can use a straight-through cable to connect PC and router. The following table below shows the 10BASE-T/ 100BASE-TX MDI and MDI-X port pin outs.

## MDI/MDI-X pins assignment

Pin Number	MDI port	MDI-X port
1	TD+(transmit)	RD+(receive)
2	TD-(transmit)	RD-(receive)
3	RD+(receive)	TD+(transmit)
4	Not used	Not used
5	Not used	Not used
6	RD-(receive)	TD-(transmit)
7	Not used	Not used
8	Not used	Not used

**Note:** "+" and "-" signs represent the polarity of the wires that make up each wire pair.

## 4.2 Wireless Antenna


A 2.4GHz antenna is used for IAR-120 / 120+ and connected with a reversed SMA connector.

External antenna also can be applied with this connector.

# Management Interface

## 5.1 First-time Installation

Before installing IAR-120 / 120+ WLAN AP router, you need to access the WLAN AP router by a computer equipped with an Ethernet card or wireless LAN interface. Using an Ethernet card to connect to LAN port is easier and recommended.

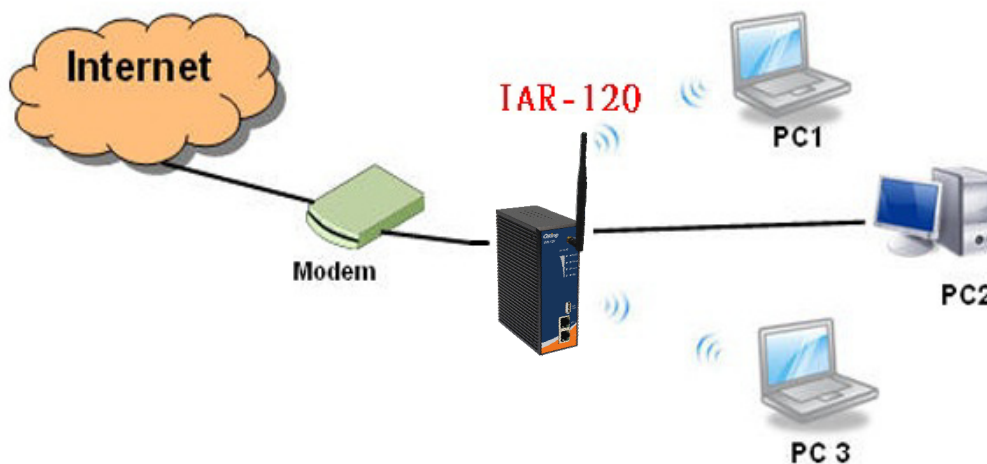

Basic connection for IAR-120 / 120+

### Step 1: Select the Power Source

IAR-120 / 120+ AP router can be powered by +12~48V DC power input, or by P.O.E. (Power over Ethernet) PSE Ethernet switch.

### Step 2: Connect a computer to IAR-120 / 120+


Use either a straight-through Ethernet cable or cross-over cable to connect to ETH1 of IAR-120 / 120+ AP router to a computer. If the LED of the LAN port lights up, it indicates the connection is established. After that, the computer will initiate a DHCP request to get an IP address from the AP router.

### Step 3: Use the web-based manager to configure IAR-120 / 120+

The default gateway IP of IAR-120 / 120+ AP router is 192.168.10.1. Start the web browser of your computer and type <http://192.168.10.1> in the address box to access the webpage. A login window will popup, and then enter the default login name **admin** and



password **admin**.

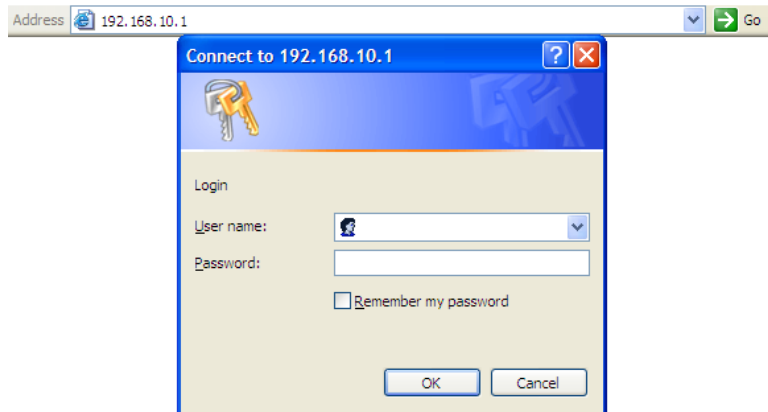

Login screen

#### Step 4: Select WAN connection type

Click the **Basic Setting** in the top menu to enter the **WAN** configuration page, select the proper connection type according to the information of your ISP. If you use **modem/3G** as WAN connection, please plug in your USB to RS232 converter with modem or 3G USB modem directly (HUAWEI E220 is supported).

Basic Setting --> WAN

WAN settings.

WAN Connection Type: Dynamic/Static IP

☒ Obtain an IP address automatically

☐ Use the following IP address:

IP Address:

Subnet Mask:

Default Gateway:

☒ Obtain DNS server address automatically

☐ Use the following DNS server addresses:

Preferred DNS:

Alternate DNS:

☐ Use Modem/3G as backup connection.

Phone Number:

User Name:

Password:

Ping Test Site:

Apply Cancel

#### Step 5: Protect the wireless access in encryption mode

Click the **Wireless** in **Basic Setting** menu, default encryption mode is **None**, choose WEP/WPA to enhance the security of wireless connection.

**Basic Setting --> Wireless**

These are the basic wireless settings for the Storage Router.

Wireless: ☒ Enabled ☐ Disabled

SSID:

Channel:

**Security Options**

Security Type:

None  
WEP  
WPA-PSK/WPA2-PSK  
WPA/WPA2

Wireless security option

### Step 6: Review the router settings and check router status

Click the **System Status** in the top of the menu, the system info page will be shown.

You can check all the configuration and status of the router.

**System Status --> System Info**

System Info.


Model:	IAR-120+_US	
Model Description:	Industrial IEEE 802.11 b/g Cellular VPN Router with 2x10/100Base-T(X),1-port PoE P.D., US band	
WAN:	Mode	Dynamic Setting
	IP Address	192.168.2.151
	Broadcast Address	192.168.2.255
	Subnet Mask	255.255.255.0
	Default Gateway	192.168.2.1
	DNS(Primary)	192.168.2.6
	DNS(Secondary)	
	MTU	1500
	MAC Address	00:1E:94:33:22:45
LAN:	IP Address	192.168.10.1
	Subnet Mask	255.255.255.0
	MTU	1500
	MAC Address	00:1E:94:33:22:44
	DHCP Server	Enabled
Wireless:	Wireless	Enabled
	SSID	oring
	Channel	6
	Encryption Mode	None
	MAC Address	00:0E:8E:21:DF:C4

System status Screen

## 5.2 Configure the Wireless Router

In this section, the web management page will be explained in detail.

By default setting, you can type <http://192.168.10.1> in the address box of web browser to login the web management interface. A login window will be prompted, enter username **admin** & password **admin** to login.

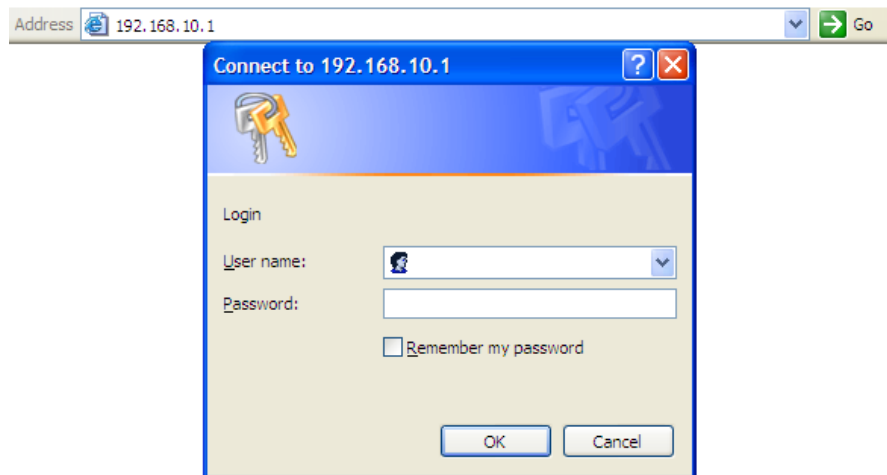


Login screen

For security reasons, we strongly recommend you to change the password. Click on **System Tools > Login Setting** and change the password.

## 5.3 Main Interface

The **Home** screen will be shown when login successfully.

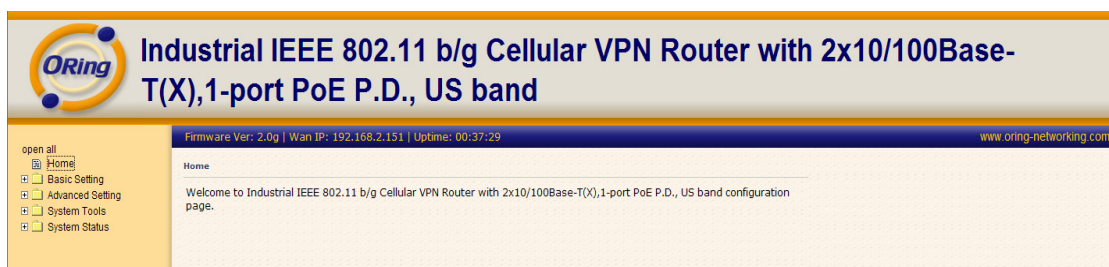

Main Interface

In the page, you can check the Firmware version, the router running time and the WAN IP setting.

The following table describes the labels in this screen.


Label	Description
<b>Firmware</b>	Show the current firmware version.
<b>Uptime</b>	Show the elapsed time since the AP router is started.
<b>Wan IP</b>	Show the WAN IP address.

### 5.3.1 Basic Setting

#### WAN

The IAR-120 / 120+ AP router provide three types of WAN connection.

##### 1. WAN Connection Type: Dynamic/Static IP

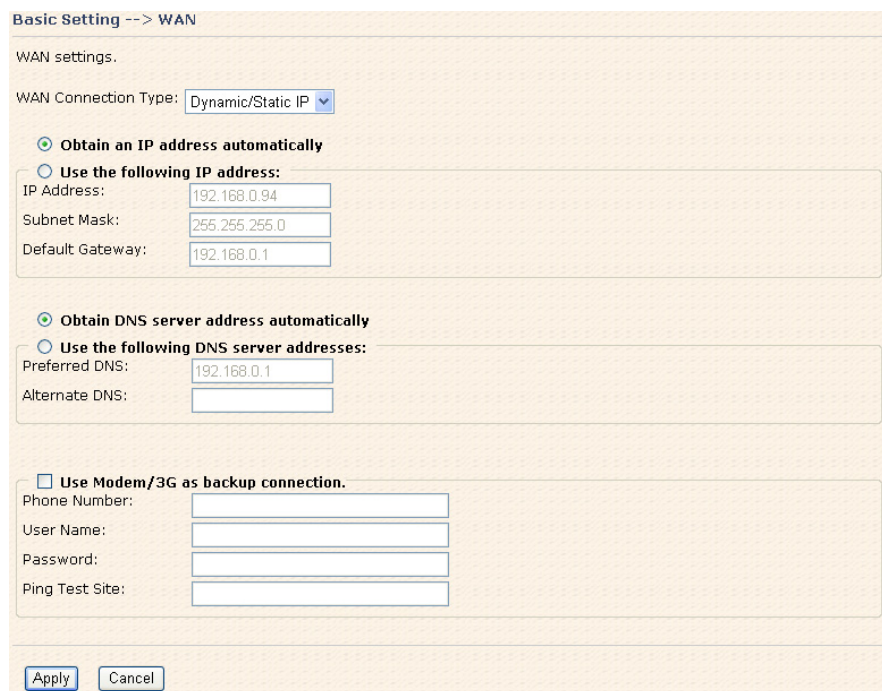

##### Dynamic/Static IP

The following table describes the labels in this screen.

Label	Description
<b>Obtain an IP address automatically</b>	Select this option if you would like to have an IP address assigned automatically from the WAN port by DHCP server in your network.
<b>Use the following IP</b>	Select this option if you would like to assign an IP address to the



<b>address</b>	WAN port manually. You should set the IP Address, Subnet Mask and Default gateway appropriately so that they comply with IP rules.
<b>Obtain DNS server address automatically</b>	Obtain DNS server from DHCP server. If the above <b>Obtain an IP address automatically</b> is selected, this option will be chosen accordingly.
<b>Use the following DNS server addresses</b>	Specify DNS server address manually.
<b>Use Modem/3G as backup connection</b>	<p>Enable this option if you want to use Modem/3G as a backup connection when normal connection is lost.</p> <p><b>Phone Number, User Name and Password:</b> Use these settings to dial up the Modem/3G connection.</p> <p><b>Ping Test Site:</b> Use this site address to check if the connection is alive or lost. Take <b>www.google.com</b> as an example.</p>



## 2. WAN Connection Type: PPPoE

Basic Setting --> WAN

WAN Settings.

WAN Connection Type:

User Name:

Password:

Service Name:  (optional)

AC Name:  (optional)

☐ Specify the IP & DNS provided by ISP ( If unknown, leave it unchecked )

IP Address:

Preferred DNS:

Alternate DNS:

**Connection Mode**

☒ Auto

☐ Connect On Demand

Max Idle Time:  minutes (0 represents never bring down the link)

☐ Manual

☐ Use Modem/3G as backup connection.

Phone Number:

User Name:

Password:

Ping Test Site:

Link Status: Disconnected

PPPoE Screen.


The following table describes the labels in this screen.

Label	Description
<b>User Name / Password</b>	Enter the username & password provided by your Internet Service Provider (ISP).
<b>Service Name</b>	Enter the service name provided by your ISP.
<b>AC Name</b>	Enter the name of the access concentrator as provided by your ISP.
<b>Specify the IP &amp; DNS provided by ISP</b>	Enter static IP and DNS address which may required by some ISP
<b>Connection Mode</b>	<p><b>Auto:</b> Connect automatically when the router boots up.</p> <p><b>Connect on Demand:</b> Select to disconnect the PPP session if the router has had no traffic for the specified amount of time. Enter the Max Idle Time in minutes.</p>

	<b>Manual:</b> Select this option to use only the Connect/Disconnect buttons to call up or close the connection.
<b>Use Modem/3G as backup connection</b>	<p>Enable this option if you want to use Modem/3G as a backup connection when PPPoE connection is lost.</p> <p><b>Phone Number, User Name and Password:</b> Use these settings to dial up the Modem/3G connection.</p> <p><b>Ping Test Site:</b> Use this site address to check if the connection is alive or lost. Example is as <b>www.google.com</b></p>

### 3. WAN Connection Type: Modem / 3G

For using this type of connection, you need an USB to RS232 converter and a modem or 3G USB modem (HUAWEI E220 is supported) directly. Please connect the converter or 3G modem to the USB port before starting the WLAN AP router.

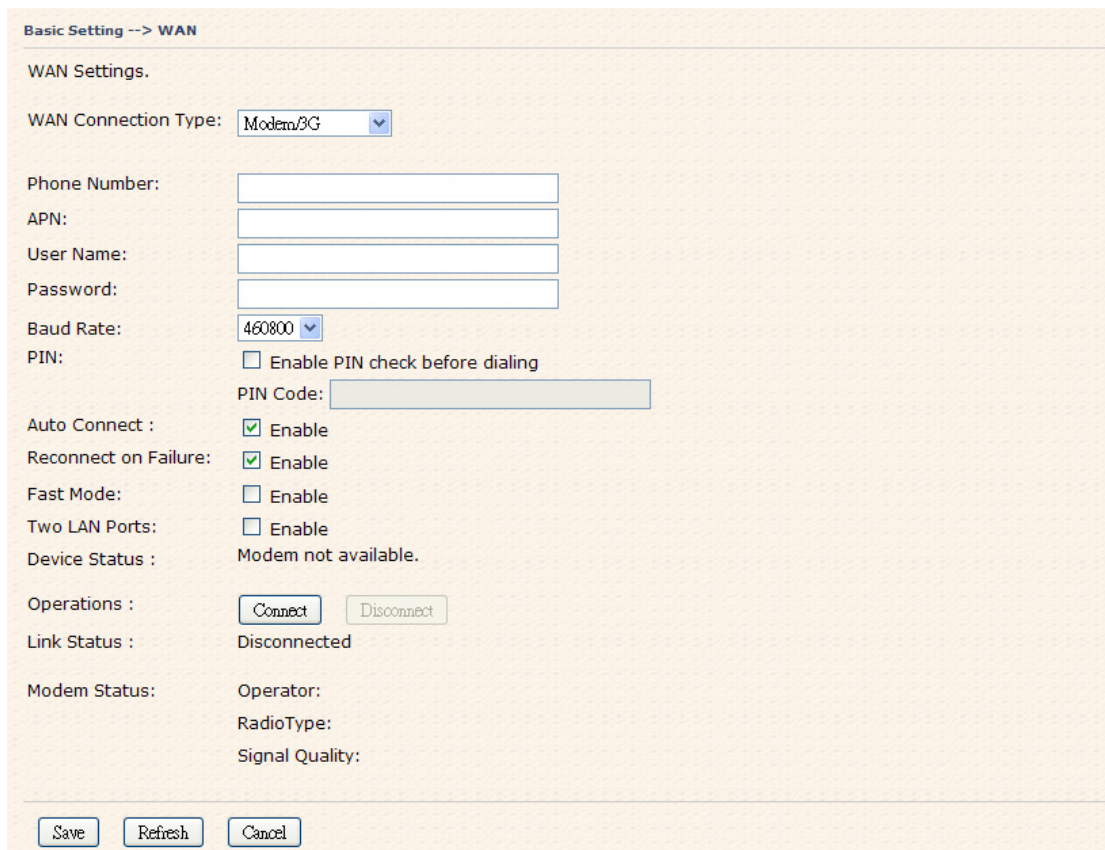

Basic Setting --> WAN

WAN Settings.

WAN Connection Type: Modem/3G

Phone Number:

APN:

User Name:

Password:

Baud Rate: 460800

PIN: ☐ Enable PIN check before dialing

PIN Code:

Auto Connect : ☒ Enable

Reconnect on Failure: ☒ Enable

Fast Mode: ☐ Enable

Two LAN Ports: ☐ Enable

Device Status : Modem not available.

Operations : Connect Disconnect

Link Status : Disconnected

Modem Status: Operator:   
RadioType:   
Signal Quality:

Save Refresh Cancel

Modem/3G Screen

The following table describes the labels in this screen.

Label	Description
<b>Phone Number</b>	Telephone number provided by your ISP.
<b>APN</b>	Enter the APN value it is optional

<b>User Name</b>	User name provided by your ISP.
<b>Password</b>	Password provided by your ISP.
<b>PIN</b>	Enter the PIN code if PIN check is required.
<b>Auto Connect</b>	If this option is enabled, the connection will be called up when router boots up.
<b>Device Status</b>	Show the status of Modem/3G device.
<b>Operations</b>	Click " <b>Connect</b> " to call up the Modem/3G. Click " <b>Disconnect</b> " to shut down the connection.
<b>Link Status</b>	Show the status of connection, <b>up</b> , <b>down</b> or <b>connecting</b> .

#### 4. WAN Connection Type: Wireless client

Basic Setting --> WAN

WAN Settings.

WAN Connection Type: Wireless Client

IP Config Setting.

☒ Obtain an IP address automatically

☐ Use the following IP address:

IP Address:

Subnet Mask:

Default Gateway:

☒ Obtain DNS server address automatically

☐ Use the following DNS server addresses:

Preferred DNS:

Alternate DNS:

Wireless Client Setting.

Peer AP SSID:  Site Scan

Security Options

Security Type: None

Options:

Two LAN Ports: ☐ Enable

☐ Use Modem/3G as backup connection.

Phone Number:

User Name:

Password:

Ping Test IP Address:

Apply Cancel

Wireless Client on WAN



Label	Description
<b>Obtain an IP address automatically</b>	Select this option if you would like to have an IP address assigned automatically from the WAN port by DHCP server in your network.
<b>Use the following IP address</b>	Select this option if you would like to assign an IP address to the WAN port manually. You should set the IP Address, Subnet Mask and Default gateway appropriately so that they comply with IP rules.
<b>Obtain DNS server address automatically</b>	Obtain DNS server from DHCP server. If the above <b>Obtain an IP address automatically</b> is selected, this option will be chosen accordingly.
<b>Use the following DNS server addresses</b>	Specify DNS server address manually.
<b>Peer AP SSID</b>	Enter the other AP or AR SSID which you want to client
<b>Site Scan</b>	You can scan the SSIDs which used for AP mode in the certainty area
<b>Security Type</b>	Set the same security with the Client unit which you want to connect.
<b>Use Modem/3G as backup connection</b>	<p>Enable this option if you want to use Modem/3G as a backup connection when normal connection is lost.</p> <p><b>Phone Number, User Name and Password:</b> Use these settings to dial up the Modem/3G connection.</p> <p><b>Ping Test Site:</b> Use this site address to check if the connection is alive or lost. Take <b>www.google.com</b> as an example.</p>

## LAN

These are the IP settings of the LAN interface for the IAR-120 / 120+ WLAN AP router. The LAN IP address is privately for your internal network and can not be exposed on the Internet.

Basic Setting --> LAN

LAN Side settings.

IP Address:

Subnet Mask:

LAN Screen

The following table describes the labels in this screen.

Label	Description
<b>IP Address</b>	The IP address of the LAN interface, the default IP address is 192.168.10.1
<b>Subnet Mask</b>	The Subnet Mask of the LAN interface, the default Subnet mask is 255.255.255.0

## DHCP

DHCP stands for Dynamic Host Control Protocol. The IAR-120 / 120+ AP router with a built-in DHCP server. The internal DHCP server will assign an IP address to the computers (DHCP client) on the LAN automatically.

Set your computers to be DHCP clients by setting their TCP/IP settings to Obtain an IP Address Automatically. The DHCP server will allocate an unused IP address from the IP address pool to the requesting computer automatically.

### 1. DHCP Sever

Basic Setting --> DHCP --> DHCP Server

Set DHCP Server.

DHCP Mode: Built-in DHCP Server

DHCP Server: ☒ Enabled ☐ Disabled

Starting IP:

Ending IP:

Lease Time:  Hours

Local Domain Name:  (optional)

DNS Server 1:  (optional)

DNS Server 2:  (optional)

WINS Server:  (optional)

DHCP Range for Relay (Need 'Apply' to validate setting changes) :

Starting IP:

Ending IP:

Subnet Mask:

List of DHCP Range for Relay:

#	Starting IP	Ending IP	Subnet Mask	Operations
---	-------------	-----------	-------------	------------

Current DHCP Client Information

#	HostName	Mac	IP	Expires In
---	----------	-----	----	------------

Static IP Allocation

DHCP Server Screen

The following table describes the labels in this screen.

Label	Description
<b>DHCP Mode</b>	Select built-in DHCP server or DHCP Forwarder
<b>DHCP Server</b>	Enable or Disable the DHCP Server. The default setting is Enable
<b>Starting IP</b>	The starting IP address of the IP range for the DHCP server
<b>Ending IP</b>	The ending IP address of the IP range for the DHCP server
<b>Lease Time</b>	The period of time for the IP to be leased. Enter the Lease time. The default setting is 48 hours.
<b>Local Domain Name</b>	Enter the local domain name of private network. It is optional.
<b>DNS Server 1&amp;2</b>	Enter the DNS Server. It is optional.
<b>WINS Server</b>	Enter the WINS Server. It is optional.
<b>DHCP Relay start IP</b>	Enter DHCP Relay starting IP
<b>DHCP Relay end IP</b>	Enter DHCP Relay Ending IP
<b>Subnet Mask</b>	Enter DHCP Relay IP Subnet mask
<b>List of DHCP Range for relay</b>	List DHCP Relay IP range
<b>Current DHCP Client Information</b>	List of the computers on your network that are assigned an IP address by internal DHCP server.

## 2. IP Allocation

The IP Allocation provides one-to-one mapping of MAC address to IP address. When a computer with the MAC address requesting an IP from the IAR-120 / 120+ AP router, it will be assigned with the IP address according to the mapping. You can choose one from the client lists and add it to the mapping relationship.

Basic Setting --> DHCP --> IP Allocation

Allocate IP Address Manually.

-- Choose a Client to Edit --

MAC Address	IP Address	
<input type="text"/>	<input type="text"/>	<input type="button" value="Add"/> <input type="button" value="Clear"/>

Static DHCP Client List:

#	MAC Address	IP Address	Operations
<input type="button" value="Delete All"/>			

IP Allocation Screen

The following table describes the labels in this screen.

Label	Description
<b>Choose a Client to Edit</b>	The list shows the MAC addresses and IP addresses that are already assigned by IAR-120 / 120+. Choose one from the list and click <b>Copy to</b> button for editing.
<b>MAC Address</b>	The MAC addresses of the computer.
<b>IP Address</b>	The IP address to be related to the MAC address.
<b>Static DHCP Client List</b>	The list shows the MAC address and IP address one-to-one relationship.

## Wireless

Basic Setting --> Wireless

These are the basic wireless settings for the Storage Router.

Wireless: ☒ Enabled ☐ Disabled

SSID:

Channel:

**Security Options**

Security Type:

None  
WEP  
WPA-PSK/WPA2-PSK  
WPA/WPA2

Wireless Screen

The following table describes the labels in this screen.

Label	Description
<b>SSID</b>	Service Set Identifier (SSID) is a unique name that identifies a network. All devices on the network must set the same SSID name in order to communicate on the network. If you change the SSID from the default setting, input your new SSID name in this field.
<b>Channel</b>	Channel 6 is the default channel. All devices on the network must share the same channel.* <b>*Note:</b> The wireless devices will automatically scan and match the wireless setting of the AP router with the same SSID.
<b>Security options</b>	Select the type of security for WLAN connection: <b>None:</b> disable encryption. <b>WEP:</b> Wired Equivalent Privacy (WEP) is a wireless security protocol for WLAN. WEP provides data encryption for communicating over the WLAN.

	<p><b>WPA-PSK/WPA2-PSK:</b> WPA-PSK or WPA2-PSK with a pre-shared key, each authorized computer is given the same pass phrase.</p> <p><b>WPA/WPA2:</b> Wi-Fi Protected Access (WPA) authentication in conjunction with a RADIUS server.</p>
--	---

### Security Type – None

No security protection for WLAN.

### Security Type – WEP

**Basic Setting --> Wireless**

These are the basic wireless settings for the Storage Router.

Wireless: ☒ Enabled ☐ Disabled

SSID:

Channel:

**Security Options**

Security Type:

Auth Mode: ☐ Open ☐ Shared ☐ WEPAUTO

WEP Encryption:

Key Type:

Default Key Index:

KEY1:

KEY2:

KEY3:

KEY4:

Wireless Security Type-WEP Screen

1. Choose one of three Auth Modes: **Open**, **Share** and **WEPAUTO**
2. WEP Encryption: Select 64 Bit or 128 Bit WEP encryption.
3. Key Type: Select **ASCII** or **Hex** key type.
4. Default Key Index: Select one of the keys to be the active key.
5. Key 1-4: Input up to four encryption keys.

**ASCII** (American Standard Code for Information Interchange) is a code for representing English letters as numbers from 0-127. **Hex** digits consist of the numbers 0-9 and the letters A-F.



## Security Type – WPA-PSK/WPA2-PSK

**Basic Setting --> Wireless**

These are the basic wireless settings for the Storage Router.

Wireless: ☒ Enabled ☐ Disabled

SSID:

Channel:

**Security Options**

Security Type:

Auth Mode: ☐ WPAPSK ☐ WPA2PSK ☐ WPAPSK/WPA2PSK mix

Encryption Type: ☐ TKIP ☐ AES ☐ TKIP/AES mix

Shared Key:

Wireless Security Type-WPA-PSK/WPA2-PSK Screen

1. Security Type: Select **WPA-PSK/WPA2-PSK**.
2. Choose one of three Auth Modes: **WPAPSK**, **WPA2PSK**, **WPAPSK/WPA2PSK mix**
3. Encryption Type: Select **TKIP** or **AES** or **TKIP/AES mix**.
4. Share Key: Enter your pass phase. The pass phase should be between 8 and 64 characters.

## Security Type – WPA /WPA2

**Basic Setting --> Wireless**

These are the basic wireless settings for the Storage Router.

Wireless: ☒ Enabled ☐ Disabled

SSID:

Channel:

**Security Options**

Security Type:

Auth Mode: ☐ WPA ☐ WPA2 ☐ WPA/WPA2 mix

Encryption Type: ☐ TKIP ☐ AES ☐ TKIP/AES mix

Radius Server IP:

Radius Port:

Shared Secret:

Wireless Security Type-WPA/WPA2 Screen

1. Security Type: Select **WPA/WPA2**
2. Auth Mode: Choose one of three Auth Modes: **WPA**, **WPA2**, **WPA/WPA2 mix**.
3. Encryption Type: Choose one of three Encryption Types: **TKIP**, **AES**, **TKIP/AES mix**.
4. Radius Server IP: Enter the IP address of the RADIUS Server.
5. Port: Enter the RADIUS port (1812 is default).
6. Shared Secret: Enter the RADIUS password or key.

## Security Type – 802.1X

Basic Setting --> Wireless

Basic wireless settings for the AP.

SSID:

Channel:

**Security Options**

Security Type:

WEP Encryption:

Key Type:

Default Key Index:

KEY1:

KEY2:

KEY3:

KEY4:

Radius Server IP:  .  .  .

Radius Port:

Shared Secret:


1. Security Type: Select **802.1X**
2. WEP Encryption: Select 64 Bit or 128 Bit WEP encryption.
3. Key Type: Select ASCII or Hex key type.
4. Default Key Index: Select one of the keys to be the active key.
5. Key 1-4: Input up to four encryption keys.
6. Radius Server IP: Enter the IP address of the RADIUS Server.
7. Port: Enter the RADIUS port (1812 is default).
8. Shared Secret: Enter the RADIUS password or key.

**RADIUS**, or Remote Authentication Dial-In User Service, is a widely deployed protocol that enables companies to authenticate, authorize and account for remote users who want access to a system or service from a central network server.

Radius server validates your proof, also carry on the authorization. So the Radius server received by ISA server responded (point out the customer carries proof to be not granted) and it means that the Radius server did not authorize you to carry. Even if the proof has already passed an identify verification, the ISA server may also refuse

you to carry a claim according to the authorization strategy of the Radius server.

The principle of the Radius server is shown in the following pictures:

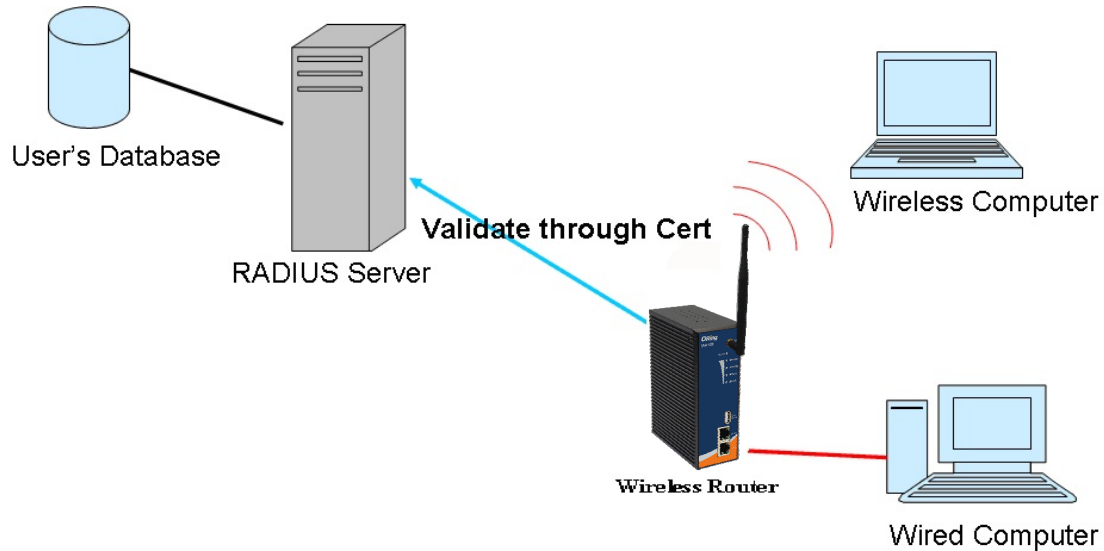

## 5.3.2 Advanced Setting

### Wireless

#### 1. Parameters

Advanced Setting --> Wireless --> Parameters

Advanced wireless parameters settings.

Beacon Interval:	<input type="text" value="100"/>	(msec, range:1~65525, default:100)
DTIM Interval:	<input type="text" value="1"/>	(range: 1~255, default:1)
Fragmentation Threshold:	<input type="text" value="2346"/>	(range: 256~2346, default:2346)
RTS Threshold:	<input type="text" value="2347"/>	(range: 1~2347, default:2347)
Xmit Power:	<input type="text" value="100"/>	% (range: 0~100, default:100)
Wireless Mode:	<input checked="" type="radio"/> BG Mixed Mode <input type="radio"/> B Mode <input type="radio"/> G Mode	
Transmission Rate:	<input type="text" value="Auto"/>	
Preamble:	<input checked="" type="radio"/> Long <input type="radio"/> Short	
SSID Broadcast:	<input checked="" type="radio"/> Enabled <input type="radio"/> Disabled	

Parameters Screen



The following table describes the labels in this screen.

Label	Description
<b>Beacon Interval</b>	The default value is 100. The Beacon Interval value indicates the frequency interval of the beacon. A beacon is a packet broadcast by the AP to synchronize the wireless network. 50 is recommended in poor connection.
<b>DTIM Interval</b>	The default value is 1. This value, between 1 and 255 milliseconds, indicates the interval of the Delivery Traffic Indication Message (DTIM). A DTIM field is a countdown field informing clients of the next window for listening to broadcast and multicast messages. When the AP has buffered broadcast or multicast messages for associated clients, it sends the next DTIM with a DTIM Interval value. Its clients hear the beacons and awaken to receive the broadcast and multicast messages.
<b>Fragmentation Threshold</b>	This value should remain at its default setting of 2346. The range is 256-2346 bytes. It specifies the maximum size for a packet before data is fragmented into multiple packets. If you experience a high packet error rate, you may slightly increase the Fragmentation Threshold. Setting the Fragmentation Threshold too low may result in poor network performance. Only minor modifications of this value are recommended.
<b>RTS Threshold</b>	This value should remain at its default setting of 2347. The range is 0-2347 bytes. Should you encounter inconsistent data flow, only minor modifications are recommended. If a network packet is smaller than the preset RTS threshold size, the RTS/CTS mechanism will not be enabled. The AP sends Request to Send (RTS) frames to a particular receiving station and negotiates the sending of a data frame. After receiving an RTS, the wireless station responds with a Clear to Send (CTS) frame to acknowledge the right to begin transmission.
<b>Xmit Power</b>	Control RF transmission power, this value ranges from 1 - 100 percent, default value is 100 percent.
<b>Wireless Network Mode</b>	If you have IEEE802.11g and IEEE802.11b devices in your network, then keep the default setting, <b>BG Mixed mode</b> . If you have only IEEE802.11g devices, select <b>G Mode</b> . If you would like to limit your network to only IEEE802.11b devices, then select <b>B Mode</b> .

<b>Transmission Rate</b>	The default setting is <b>Auto</b> . The range is from 1 to 54Mbps. The rate of data transmission should be set depending on the speed of your wireless network. You can select from a range of transmission speeds, or keep the default setting, <b>Auto</b> , to have the AP automatically use the fastest possible data rate and enable the Auto-Fallback feature. Auto-Fallback will negotiate the best and possible connection speed between the AP and a wireless client.
<b>Preamble</b>	Values are <b>Long</b> and <b>Short</b> , default value is <b>Long</b> . If your wireless device supports the short preamble and you are having trouble getting it to communicate with other IEEE802.11b devices, make sure that it is set to use the long preamble
<b>SSID Broadcast</b>	When wireless clients survey the local area for wireless networks to associate with, they will detect the SSID broadcast by the AP. To broadcast the AP SSID, keep the default setting, <b>Enable</b> . If you do not want to broadcast the AP SSID, then select <b>Disable</b> .

## 2. MAC Filter

Use **MAC Filter** to allow or deny wireless clients to associate with IAR-120 / 120+ AP router. You can manually add a MAC address or select the MAC address from **Associated Clients** that are currently associated with IAR-120 / 120+.

**Advanced Setting --> Wireless --> MAC filter**

Filters are used to allow or deny Wireless Clients users from accessing the AP Router.

MAC Filter: ☐ Enabled ☒ Disabled

**Options**

☒ Only allow MAC address(es) listed below to connect to AP

☐ Only deny MAC address(es) listed below to connect to AP

Associated Clients:  Copy to Slot:

**MAC Filter Table:**

1.	<input type="text"/>	11.	<input type="text"/>	21.	<input type="text"/>
2.	<input type="text"/>	12.	<input type="text"/>	22.	<input type="text"/>
3.	<input type="text"/>	13.	<input type="text"/>	23.	<input type="text"/>
4.	<input type="text"/>	14.	<input type="text"/>	24.	<input type="text"/>
5.	<input type="text"/>	15.	<input type="text"/>	25.	<input type="text"/>
6.	<input type="text"/>	16.	<input type="text"/>	26.	<input type="text"/>
7.	<input type="text"/>	17.	<input type="text"/>	27.	<input type="text"/>
8.	<input type="text"/>	18.	<input type="text"/>	28.	<input type="text"/>
9.	<input type="text"/>	19.	<input type="text"/>	29.	<input type="text"/>
10.	<input type="text"/>	20.	<input type="text"/>	30.	<input type="text"/>

MAC Filter Screen

The following table describes the labels in this screen.

Label	Description
<b>MAC Filter</b>	Enable or disable the function of MAC filter.
<b>MAC Filter List</b>	This list shows the MAC addresses that are in the selected filter.
<b>Connected Clients</b>	This list shows the wireless MAC addresses that associated with AP.
<b>MAC Address</b>	MAC addresses for editing.
<b>Apply</b>	Click Apply to activate the configurations.

## NAT Setting

### 1. Virtual Server

Virtual Server is used for setting up public services on the LAN, such as DNS, FTP and Email. Virtual Server is defined as a Local Port to the LAN servers, and all requests from Internet to this Local port will be redirected to the computer specified by the Local IP. Any PC that was used for a virtual server must have static or reserved IP Address because its IP address may change when requesting IP by DHCP.

Advanced Setting --> NAT Setting --> Virtual Server

Virtual server settings.

Virtual Server: ☒ Enable ☐ Disable

Description:

Public IP: ☒ All ☐ Specify

Public Port:

Protocol: ☒ TCP ☐ UDP ☐ Both

Local IP:

Local Port:

Enable Now: ☒ Yes ☐ No

Virtual server list:

#	Description	Public IP	Public Port	Protocol	Local IP	Local Port	Enabled	Ops
1	ftp	0/0	21	tcp	192.168.0.202	21	<input checked="" type="checkbox"/>	<input type="button" value="Edit"/> <input type="button" value="Del"/>

Virtual Server

The following table describes the labels in this screen.

Label	Description
<b>Virtual Server</b>	Enable or disable Virtual Server.
<b>Description</b>	Enter the description of the entry. Acceptable characters consist of '0-9', 'a-z', 'A-Z'. This field accepts null value.
<b>Public IP</b>	Enter the public IP that is allowed to access the virtual service, if not specified, choose All.
<b>Public Port</b>	The port number on the WAN (Wide Area Network) side that will be used to access the virtual service.
<b>Protocol</b>	The protocol used for the virtual service.
<b>Local IP</b>	The IP of the computer that will be providing the virtual service.
<b>Local Port</b>	The port number of the service used by the Private IP computer.
<b>Enable Now</b>	Enable the virtual server entry after adding it.
<b>Virtual server list</b>	Click <b>Edit</b> to edit the virtual service entry, <b>Del</b> to delete the entry.

## 2 Port Trigger

Some applications require multiple connections, like Internet games, video conferencing, Internet calling and so on. These applications cannot work with a pure NAT router. Port Trigger is used for some of the applications that can work with an NAT router.

Advanced Setting --> NAT Setting -> Port Trigger

Port Trigger settings.

Port Trigger: ☒ Enable ☐ Disable

Description:

Trigger Port:

Trigger Protocol: ☒ TCP ☐ UDP ☐ Both

Incoming Port:

Incoming Protocol: ☒ TCP ☐ UDP ☐ Both

Enable: ☒ Yes ☐ No

Port Trigger List:

#	Description	Trigger Protocol	Trigger Port	Incoming Protocol	Incoming Port	Enable	Ops
1	pp	tcp	21	tcp	23,32,32,2222	<input checked="" type="checkbox"/>	<input type="button" value="Edit"/> <input type="button" value="Del"/>

Port Trigger Screen

The following table describes the labels in this screen.

Label	Description
<b>Port Trigger</b>	Enable or disable Port Trigger.
<b>Description</b>	This is the description for the entry.
<b>Trigger Port</b>	This is the port used to trigger the application.
<b>Trigger Protocol</b>	This is the protocol used to trigger the application.
<b>Incoming Port</b>	This is the port number on the WAN side that will be used to access the application.
<b>Enable</b>	Enable the rule after adding the entry.
<b>Port Trigger List</b>	Click <b>Edit</b> to edit the entry, click <b>Del</b> to delete the entry.

### 3. DMZ

It allows a computer to be exposed to the Internet. This feature is useful for gaming purposes.

Enter the IP address of the internal computer that will be the DMZ host. Adding a client to the DMZ may expose your local network with variety of security risks, so only use this option carefully.

Advanced Setting --> NAT Setting -> DMZ

DMZ settings.

DMZ: ☐ Enable ☒ Disable

Description:

DMZ Host IP:

DMZ Screen

The following table describes the labels in this screen.

Label	Description
<b>DMZ</b>	Enable or disable the DMZ.
<b>Description</b>	Description for the DMZ host entry.
<b>DMZ Host IP</b>	Enter the IP address of the computer to be in the DMZ.

#### 4. UPnP

The UPnP (Universal Plug and Play) feature allows the devices, such as Internet computers, to access the local host resources or devices as needed. UPnP devices can be automatically discovered by the UPnP service application on the LAN.

Advanced Setting --> NAT Setting -> UPnP

UPnP settings.

UPnP: ☒ Enabled ☐ Disabled  
☐ Enable NAT-PMP

UPnP List:

#	Application	Ext Port	Protocol	Int Port	IP Address	Status

Apply Cancel

UPnP Screen

The following table describes the labels in this screen.

Label	Description
<b>UPnP</b>	Enable or disable UPnP.
<b>Enable NAT-PMP</b>	NAT-PMP allows a computer in a private network (behind a NAT router) to automatically configure the router to allow parties outside the private network to contact with each other. NAT-PMP operates with UDP. It essentially automates the process of port forwarding. Check the box to enable NAT-PMP.
<b>UPnP List</b>	This table lists the current auto port forwarding information. <b>Application:</b> The application that generates this port forwarding. <b>Ext Port:</b> The port opened on WAN side. <b>Protocol:</b> The protocol type. <b>Int Port:</b> The port redirected to the local computer. <b>IP Address:</b> The IP address of local computer to be redirected to.



**Status:** This status shows if the entry is valid or not.

## Security Setting

### 1. IP Filter

Filters are used to deny or allow LAN computers from accessing the internet. It also allow or deny WAN hosts to access LAN computers.

**Advanced Setting --> Security Setting --> IP Filter**

IP filter settings.

IP Filter: ☐ Enable ☒ Disable

Description:

Rule:

Direction:

IP Address: Source IP:  Destination IP:

Protocol: ☐ All ☐ ICMP ☐ Specify protocol number:  ☒ TCP ☐ Specify port:  ☐ UDP ☐ Specify port:

Enable Now: ☒ Yes ☐ No

IP filter list:

#	Description	Rule	Direction	Source IP	Destination IP	Protocol	Port	Enabled	Operations
---	-------------	------	-----------	-----------	----------------	----------	------	---------	------------

#### IP Filter Screen

The following table describes the labels in this screen.

Label	Description
<b>IP Filter</b>	Enable or disable the IP Filter.
<b>Description</b>	Enter description for the entry.
<b>Rule</b>	Select <b>DROP</b> , <b>ACCEPT</b> and <b>REJECT</b> rule for the entry.
<b>Direction</b>	Specify the direction of the data flow that is to be filtered.
<b>IP Address</b>	Enter the IP address of the source and destination computer.
<b>Protocol</b>	Choose which protocol to be filtered.
<b>Enable Now</b>	Enable the entry after adding it.
<b>IP filter list</b>	Click <b>edit</b> for editing the entry, click <b>Del</b> to delete the entry.

## 2. MAC Filter

Filters are used to deny or allow LAN computers from accessing the internet, according to their MAC address.

Advanced Setting --> Security Setting -> MAC Filter

MAC Filter settings.

MAC Filter: ☐ Enable ☒ Disable

Description:

Rule:

MAC Address:  (e.x. 00:11:22:aa:bb:cc)

Enable Now: ☒ Yes ☐ No

IP filter list:

#	Description	Rule	MAC Address	Enabled	Operations
---	-------------	------	-------------	---------	------------

MAC Filter Screen

The following table describes the labels in this screen.

Label	Description
<b>MAC Filter</b>	Enable or disable the MAC Filter.
<b>Description</b>	Enter the description for the entry.
<b>Rule</b>	Select <b>DROP</b> , <b>ACCEPT</b> and <b>REJECT</b> rule for the entry.
<b>MAC Address</b>	Enter the MAC address to be filtered.
<b>Enable Now</b>	Enable the entry after adding it.
<b>IP filter list</b>	Click <b>Edit</b> for editing the entry, click <b>Del</b> to delete the entry.

## VPN Setting

VPN Setting is settings that are used to create virtual private tunnels to remote VPN gateways. The tunnel technology supports data confidentiality, data origin, authentication and data integrity of network information by utilizing encapsulation protocols, encryption algorithms, and hashing algorithms.

### 1. Open VPN

Open VPN is a full-functioned SSL VPN solution which can accommodates a wide range of configurations including remote access, site-to-site VPNs, WiFi security, and enterprise-scale remote access solutions with load balancing, failover, and fine-grained access-controls.



Advanced Setting --> Vpn Setting --> Openvpn

Openvpn settings.

**Server settings.**

Openvpn Server: ☐ Enable ☒ Disable

Tunnel Protocol:

Port:

LZO Compression: ☒ Enable ☐ Disable

Keys Setting:

**Client settings.**

Openvpn Client: ☐ Enable ☒ Disable

Server IP/Host Name:

Tunnel Protocol:

Port:


LZO Compression: ☒ Enable ☐ Disable

Keys Setting:

Open VPN Screen

The following topology shows the common use of VPN connection from WAN side.

### 1: Open VPN Server

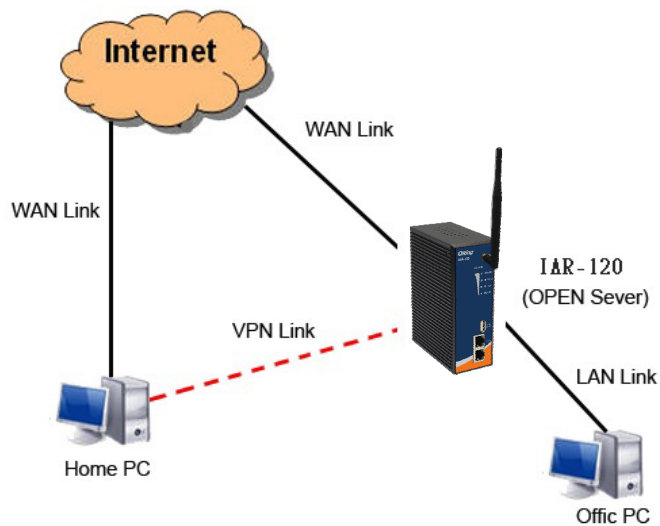

Connection to Open VPN Server

Before connecting to the Openvpn server of IAR-120 / 120+ AP router, please install openvpn client software for your windows PC. It can be downloading from <http://openvpn.net/download.html#stable>. The current version of Openvpn used in IAR-120 / 120+ is version 2.0.9. The corresponding software for client should be installed.

The following table describes the labels in this screen.

Label	Description
<b>Open VPN Server</b>	Enable or disable the function of Open VPN Server.
<b>Tunnel Protocol</b>	Select UDP or TCP protocol.
<b>Port</b>	Input the number about the port, and the default is 1194.
<b>LZO Compression</b>	Enable or disable the function of LZO Compression.
<b>Keys Setting</b>	Select Auto to use the preset certificates, select Manual to paste your certificates. Please install openvpn client software to generate your certificates and paste them here. For more information, please visit openvpn website.


## 2: Open VPN Client

Two routers are needed for creating site-to-site VPN connection using this mode.

The following table describes the labels in this screen.

Label	Description
<b>Open VPN Client</b>	Enable or disable the function of Open VPN Client. You can allow or deny the Open VPN Client with this option.
<b>Server IP</b>	Enter the Open VPN Server IP address.
<b>Tunnel Protocol</b>	Select UDP or TCP protocol.
<b>Port</b>	Enter the port number, default is 1194.
<b>LZO Compression</b>	Enable or disable the LZO Compression.
<b>Keys Setting</b>	Select <b>Auto</b> to use the preset certificates, select <b>Manual</b> to paste your certificates. Please install software for openvpn client to generate your certificates and paste them here. For more information, please visit openvpn website.

### 3: Open VPN Server VS Client

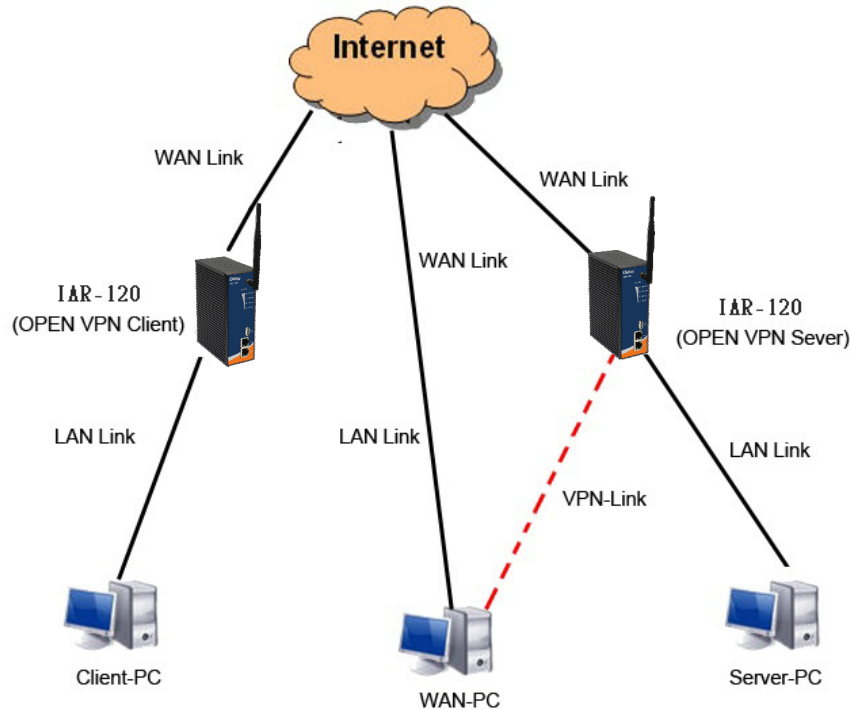

Client-PC and connect to Server-PC,WAN-PC

The chart above displays the connection of Open VPN Server and Client. The Server IP and Client IP address should configure with the same network domain.

## 2. PPTP VPN

The PPTP (Point to Point Tunneling Protocol) VPN feature allows PC connected to the router from WAN port, just like connecting in the LAN.

To create a PPTP connection to the router, you should create a PPTP network connection if you are using a window PC. The steps are: **Right click Network > property > create a new connection > connect to my work space (VPN) > use VPN to internet > enter the user name and password** which are set in the page.

Advanced Setting --> Vpn Setting -> PPTP Vpn

PPTP Server settings.

PPTP Server: ☐ Enable ☒ Disable

Server IP: 192.168.10.1

Clients IP: 192.168.10.150-180

PPP Options:

- ☐ require-chap
- ☐ require-mschap
- ☒ require-mschap-v2
- ☒ require-mppe

Routing Option: ☒ Enable Routing Protocols through PPTP VPN Connection


CHAP-Secrets:

```
admin * admin *
```

Apply Cancel

PPTP VPN Screen

The following topology shows the common use of PPTP connection from the internet.

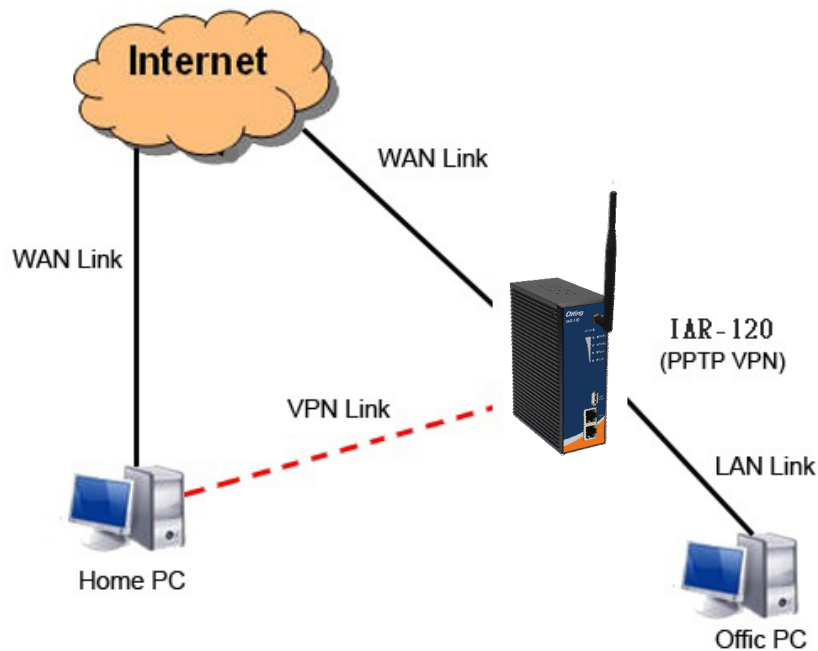

Connection to PPTP VPN Server

The following table describes the labels in this screen.

Label	Description
<b>PPTP Server</b>	Enable or disable PPTP VPN Server.
<b>Server IP</b>	Enter the server side IP address, default is the LAN port IP.
<b>Client IP</b>	Enter the IP address range, format is as <b>192.168.10.xx-xx</b> , connected client will be assigned the IP address.
<b>CHAP-Secrets</b>	Enter the username and password pairs, format is as <b>user * pass</b> *, multiple username password pairs are allowed.

### 3. PPTP Client

If the router A want to link with the others which is not in the same network with the router A, the function of PPTP client should support in the router page.

**Advanced Setting --> Vpn Setting -> PPTP Client**

PPTP Client settings.

PPTP Client ☐ Enable ☒ Disable

Server IP/Hostname:

Username:

Password:


Options:

- ☒ Reconnect on failure
- ☐ default route
- ☐ require-chap
- ☐ require-mschap
- ☒ require-mschap-v2
- ☒ require-mppe

Routing Option: ☒ Enable Routing Protocols through PPTP Client Connection

Operations:

Link Status: Disconnected

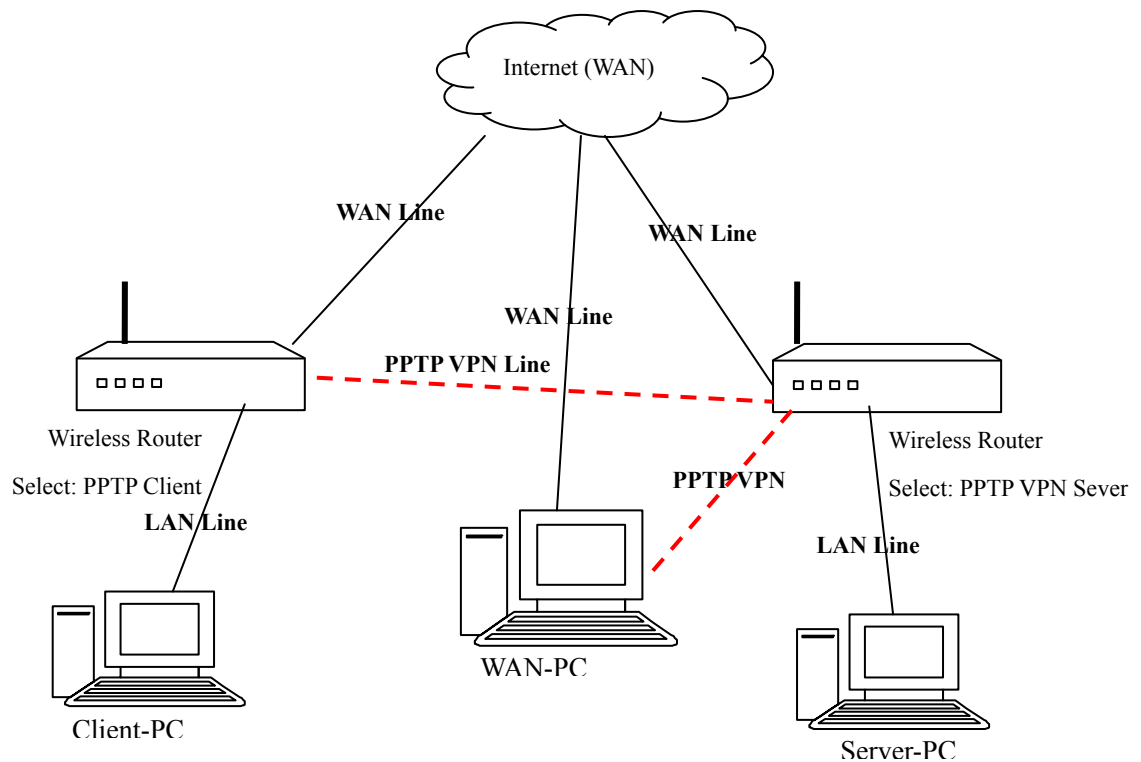

Result: Client-PC can connect to Server-PC, WAN-PC.

Label	Description
<b>PPTP Client</b>	Enable or disable PPTP Client.
<b>Server IP/Hostname</b>	Enter the server IP address or hostname.
<b>Username/Password</b>	Enter the username and password which is signed by PPTP server.
<b>Option</b>	<p><b>Reconnect on failure:</b> Pitch on this option, it will be reconnect when the link is on failure.</p> <p><b>Require MPPE:</b> Choose Enable Require MPPE (Microsoft Point-to-Point Encryption) to encrypt data across Point-to-Point Protocol (PPP) and Virtual Private Network links.</p>
<b>Operations</b>	Click "Connect" to link the server, if or not, you can click "Disconnect" to break off from the server.
<b>Link Status</b>	Show the status about the link.



## Routing Protocol (Routing Setting)

This page shows the information of routing table. The initial state of the router connect to the WAN, it will be based on the outside networks to access the routing table automatically. You can refer the shows about the bellow page.

Current Routing Table:

Destination	Gateway	Subnet Mask	Metric	Interface
192.168.16.0	0.0.0.0	255.255.255.0	0	br0(LAN)
192.168.0.0	0.0.0.0	255.255.255.0	0	eth1(WAN)
127.0.0.0	0.0.0.0	255.0.0.0	0	lo(LOOPBACK)
default	192.168.0.1	0.0.0.0	0	eth1(WAN)

The table shows the normal routing table

### 1. Use Dynamic Routing

Use the dynamic routing, you should not choose "Disable" about the **RIPv1 & v2** in the routers.

Click "Apply", and you can see the more information in the **Current Routing Table**, which shows the network segment of the other router.

**Advanced Setting --> Routing Protocol --> Routing Setting**

Current Routing Table:

Destination	Gateway	Subnet Mask	Metric	Interface
192.168.16.0	0.0.0.0	255.255.255.0	0	br0(LAN)
192.168.0.0	0.0.0.0	255.255.255.0	0	eth1(WAN)
192.168.10.0	192.168.0.10	255.255.255.0	2	eth1(WAN)
127.0.0.0	0.0.0.0	255.0.0.0	0	lo(LOOPBACK)
default	192.168.0.1	0.0.0.0	0	eth1(WAN)

Static Route Entry:

Destination	Gateway	Subnet Mask	Metric	Interface	Operations
<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	WAN <input type="button" value="v"/>	<input type="button" value="Add"/>

Mode:

RIPv1 & v2:

Telnet Setting: ☒ Enable ☐ Disable

Port:

Password:



Label	Description
<b>Current Routing Table</b>	Show the current the routing information.
<b>Static Router Entry</b>	Not RIP and enter the right value in the textbox will be showing.
<b>Mode</b>	If you want to the PC in the router can visit the outside network, only choose the <b>Gateway Mode</b> ; if or not, you choose the <b>Router Mode</b> .
<b>RIPv1 &amp;v2</b>	Choose "Disable" in the Static routing.
<b>Telnet Setting</b>	Only use in the Dynamic routing.

Simultaneously, only use the Telnet function in the dynamic routing. You can telnet the LAN IP and there are many orders.

```

C:\> Telnet 192.168.10.1
Command incomplete.

Hello, this is zebra (version 0.94).
Copyright 1996-2002 Kunihiro Ishiguro.

IAPR654978>
enable      Turn on privileged mode command
exit        Exit current mode and down to previous mode
list        Print command list
ping        send echo messages
quit        Exit current mode and down to previous mode
show        Show running system information
telnet      Open a telnet connection
traceroute  Trace route to destination
  
```

## 2. Use Static Routing

Use the Static routing, you should choose "Disable" about the **RIPv1 & v2** in the routers. Click "Apply", and you can see the more information in the **Current Routing Table** and **Static Route Entry**, which shows the network segment of the other router.

Current Routing Table:

Destination	Gateway	Subnet Mask	Metric	Interface
192.168.16.0	0.0.0.0	255.255.255.0	0	br0(LAN)
192.168.0.0	0.0.0.0	255.255.255.0	0	eth1(WAN)
192.168.10.0	192.168.0.10	255.255.255.0	2	eth1(WAN)
127.0.0.0	0.0.0.0	255.0.0.0	0	lo(LOOPBACK)
default	192.168.0.1	0.0.0.0	0	eth1(WAN)

Static Route Entry:

Destination	Gateway	Subnet Mask	Metric	Interface	Operations
192.168.10.0	192.168.0.10	255.255.255.0	2	WAN	<button>Commit</button> <button>Delete</button>

Destination	Gateway	Subnet Mask	Metric	Interface	Operation
<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	WAN	<button>Add</button>

Mode:

RIPv1 & v2:


Netinet Setting: ☐ Enable ☒ Disable

Port:

Password:

Apply Cancel

Use the dynamic routing; it will have many ways such as RIP, OSPF.BGP. In this router, we use the RIP Protocol to finish the dynamic routing table.

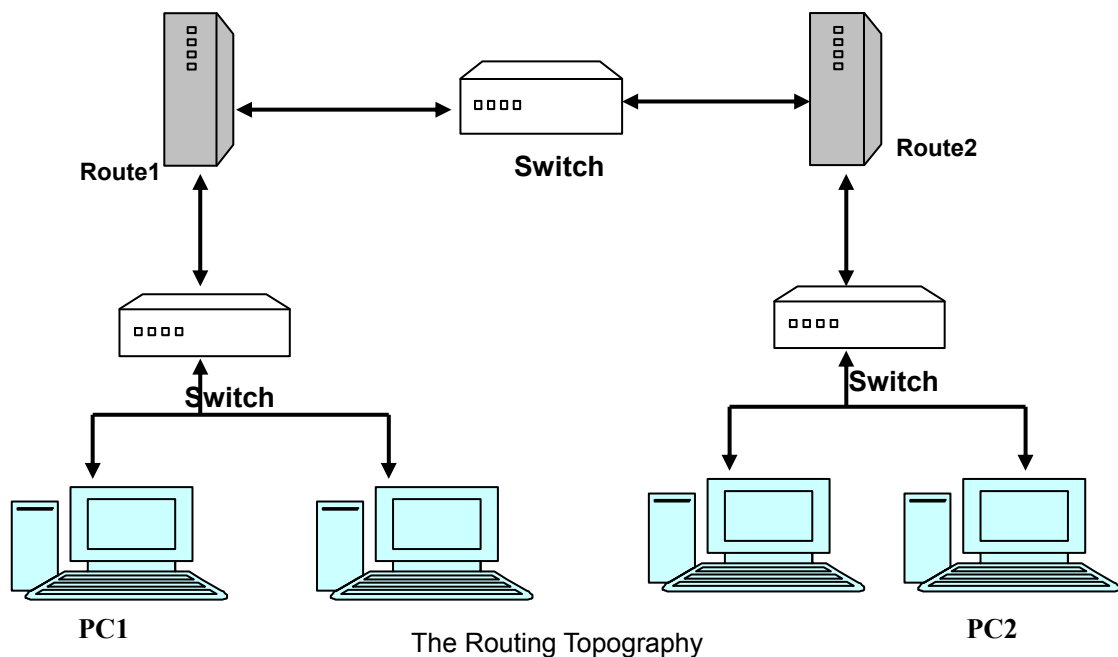

**RIP**, Routing Information Protocol, is a dynamic routing protocol used in local and wide area networks. As such it is classified as an interior gateway protocol (IGP) using the distance-vector routing algorithm.

After all settings, PC1 can visit PC2 which is different network segment of the PC1.

## Notification

### 1. Email/SNMP/Syslog

#### Email Settings

Email settings.

SMTP Server:	<input type="text"/>	(optional)
Server Port:	<input type="text"/>	(0 represents default)
E-mail Address 1:	<input type="text"/>	
E-mail Address 2:	<input type="text"/>	
E-mail Address 3:	<input type="text"/>	
E-mail Address 4:	<input type="text"/>	

Email Settings Screen

The following table describes the labels in this screen.

Label	Description
<b>SMTP Server</b>	Simple Message Transfer Protocol, enter the backup host to use if primary host is not available while sending mail by SMTP server.
<b>Server Port</b>	Specify the port where MTA can be contacted via SMTP server.
<b>E-mail Address 1-4</b>	Enter the mail addresses.

#### SNMP Settings

SNMP settings.

SNMP Agent:	<input type="radio"/> Enable <input type="radio"/> Disable
SNMP Trap Server 1:	<input type="text"/>
SNMP Trap Server 2:	<input type="text"/>
SNMP Trap Server 3:	<input type="text"/>
SNMP Trap Server 4:	<input type="text"/>
Community:	<input type="text"/>
SysLocation:	<input type="text"/>
SysContact:	<input type="text"/>

SNMP Settings

The following table describes the labels in this screen.

Label	Description
<b>SNMP Agent</b>	SNMP (Simple Network Management Protocol) agent communicates with the SNMP manager. The agent provides management information to the NMS by keeping track of various operational aspects of the system. Turn on to open this service and off to disable it.

<b>SNMP Trap Server 1-4</b>	Specify the IP address of trap server, which is the address to which SNMP trap messages are sent.
<b>Community</b>	Community is essentially password to establish trust between managers and agents. Normally "public" is used for read-write community.
<b>SysLocation</b>	Specify sysLocation string.
<b>SysContact</b>	Specify sysContact string.

### Syslog Server Settings

Syslog Server settings.

Syslog Server IP:	<input type="text"/>
Syslog Server Port:	<input type="text"/> (0 represents default)

Syslog Server Screen

The following table describes the labels in this screen.

Label	Description
<b>Syslog Server IP</b>	Not only the Syslog keeps the logs locally, it can also log to remote server. Specify the IP of remote server. Leave it blank to disable logging remotely.
<b>Syslog Server Port</b>	Specify the port of remote logging. Default port is 514.

## 2. System Event

When specified event is triggered, the notification procedure will be performed according to the type of the event. Which notification would be performed depends on the selection of corresponding option in the **Advanced Setting > Notification > System Event** page.

System Event Configuration.

Device Event Notification.			
Hardware Reset (Cold Start)	<input type="checkbox"/> SMTP Mail	<input type="checkbox"/> SNMP Trap	<input type="checkbox"/> Syslog
Software Reset (Warm Start)	<input type="checkbox"/> SMTP Mail	<input type="checkbox"/> SNMP Trap	<input type="checkbox"/> Syslog
Login Failed	<input type="checkbox"/> SMTP Mail	<input type="checkbox"/> SNMP Trap	<input type="checkbox"/> Syslog
IP Address Changed	<input type="checkbox"/> SMTP Mail	<input type="checkbox"/> SNMP Trap	<input type="checkbox"/> Syslog
Password Changed	<input type="checkbox"/> SMTP Mail	<input type="checkbox"/> SNMP Trap	<input type="checkbox"/> Syslog
Redundant Power Changed	<input type="checkbox"/> SMTP Mail	<input type="checkbox"/> SNMP Trap	<input type="checkbox"/> Syslog
SNMP Access Failed	<input type="checkbox"/> SMTP Mail	<input type="checkbox"/> SNMP Trap	<input type="checkbox"/> Syslog
Wireless Client Associated	<input type="checkbox"/> SMTP Mail	<input type="checkbox"/> SNMP Trap	<input type="checkbox"/> Syslog
Wireless Client Disassociated	<input type="checkbox"/> SMTP Mail	<input type="checkbox"/> SNMP Trap	<input type="checkbox"/> Syslog

Fault Event Notification and Fault LED/Relay.				
Power 1 Fault	<input type="checkbox"/> SMTP Mail	<input type="checkbox"/> SNMP Trap	<input type="checkbox"/> Syslog	<input type="checkbox"/> Fault LED/Relay
Power 2 Fault	<input type="checkbox"/> SMTP Mail	<input type="checkbox"/> SNMP Trap	<input type="checkbox"/> Syslog	<input type="checkbox"/> Fault LED/Relay
Eth1 Link Down	<input type="checkbox"/> SMTP Mail	<input type="checkbox"/> SNMP Trap	<input type="checkbox"/> Syslog	<input type="checkbox"/> Fault LED/Relay
Eth2 Link Down	<input type="checkbox"/> SMTP Mail	<input type="checkbox"/> SNMP Trap	<input type="checkbox"/> Syslog	<input type="checkbox"/> Fault LED/Relay

System Event Screen

System events record the activities of the Wireless Router system. When the setting changes or action performs, the event will be sent to administrator by email. A trap will also be sent to SNMP trap server. The Syslog will record the event locally and may send the Syslog remotely to a Syslog server. If serious event occurred, such as the power failure or link down, the fault led will be switched on as warning indication.

### Miscellaneous (DDNS)

Dynamic Domain Name System is a method of keeping a domain name linked to a changing IP address.

Advanced Setting --> Miscellaneous --> DDNS

DDNS settings.

DDNS Service:

User Name:  (\*)

Password:  (\*)

Domain:  (\*)

Mail Server:

Use Wildcard:

DDNS Screen

For example, Choose DDNS Service: [www.3322.org](http://www.3322.org) and configure the following instructions:

The following table describes the labels in this screen.

Label	Description
<b>User Name</b>	Enter the user name for your DDNS account.
<b>Password</b>	Enter the password for your DDNS account.
<b>Domain</b>	Enter the domain names provided by your dynamic DNS service provider.
<b>Mail Server</b>	Enter the mail server if provided.
<b>Use Wildcard</b>	Check the box the enable wildcard option.

### 5.3.3 System Tools

#### Date & Time

In this page, you can set the date & time of the device. The correct date & time will be helpful for logging of system events. A NTP (Network Time Protocol) client can be used to synchronize date & time with NTP server through internet.

**System Tools --> Date & Time**

Date/Time settings.

Local Date:  Year  Month  Day

Local Time:  Hour  Minute  Second

Time Zone:

NTP: ☒ Enable

NTP Server 1:

NTP Server 2:  (optional)

Synchronise:  at  :

Date & Time Screen

The following table describes the labels in this screen.


Label	Description
<b>Local Date</b>	Set local date manually.



<b>Local Time</b>	Set local time manually.
<b>Time Zone</b>	Select the time zone manually
<b>Get Current Date &amp; Time from Browser</b>	Click this button; you can set the time from your browser.
<b>NTP</b>	Enable or disable NTP function to synchronize time from the NTP server.
<b>NTP Server 1</b>	The primary NTP Server.
<b>NTP Server 2</b>	The secondary NTP Server.
<b>Synchronize</b>	This is the scheduled time when the NTP synchronization performed.

## Login Setting

At this page, the administrator can change the login name and password. The default name and password is **admin** and **admin**.

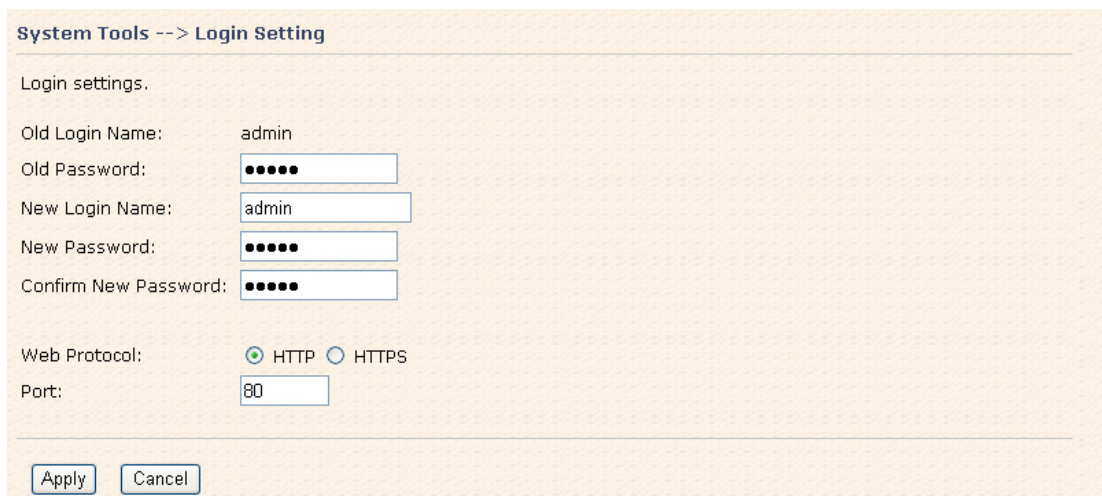

System Tools --> Login Setting

Login settings.

Old Login Name: admin

Old Password: [password field]

New Login Name: admin

New Password: [password field]

Confirm New Password: [password field]

Web Protocol: ☒ HTTP ☐ HTTPS

Port: 80

[Apply] [Cancel]

Login Setting Screen

The following table describes the labels in this screen.

Label	Description
<b>Old Name</b>	This field shows the old login name.
<b>Old Password</b>	Before making a new setting, you should provide the old password for verification. Acceptable characters of this field contains '0-9', 'a-z', 'A-Z' and must be between 0 to 15 characters in length. An empty password is also acceptable.
<b>New Name</b>	Enter a new login name. Acceptable characters of this field



	contains '0-9', 'a-z', 'A-Z' and must be between 1 to 15 characters in length. An empty name is not acceptable.
<b>New Password</b>	Enter a new login password. Acceptable characters of this field contains '0-9', 'a-z', 'A-Z' and must be between 0 to 15 characters in length.
<b>Confirm New Password</b>	Retype the password to confirm it. Acceptable inputs of this field contains '0-9', 'a-z', 'A-Z' and must be between 0 to 15 characters in length.
<b>Web Protocol</b>	Choose the web management page protocol. HTTP and HTTPS are both supported.
<b>Port</b>	Choose the web management page port number. For HTTP, default port is 80; For HTTPS, default port is 443.

**HTTPS** (HTTP over SSL) is a Web protocol which encrypts and decrypts user page requests as well as the pages that are returned by the Web server.

### Router Restart

If you want restart the router through the **Warm Reset**, click **Restart Now** to restart the Wireless Router. Also, you can set a **Scheduling** time to make the router restart.

System Tools --> Router Restart

Router Restart Utility.

Scheduling: ☐ Enable

Restart  at  :

Router Restart Screen

### Firmware Upgrade

System Tools --> Firmware Upgrade

**Do NOT power off the router while upgrading!**

Current Firmware Version: 2.0g


Upgrade Mode:

Firmware Upgrade Screen

Newer firmware may provide better performance or function extensions. To upgrade the new firmware, you need a firmware file which matches the model of this AP router. It will take several minutes to upload and update the firmware. After the upgrade is done successfully, reboot the router to utilized new firmware.


**Important Notice: DO NOT POWER OFF THE ROUTER OR PRESS THE RESET BUTTON WHILE THE FIRMWARE IS BEING UPGRADED.**

## Save/Restore Configurations

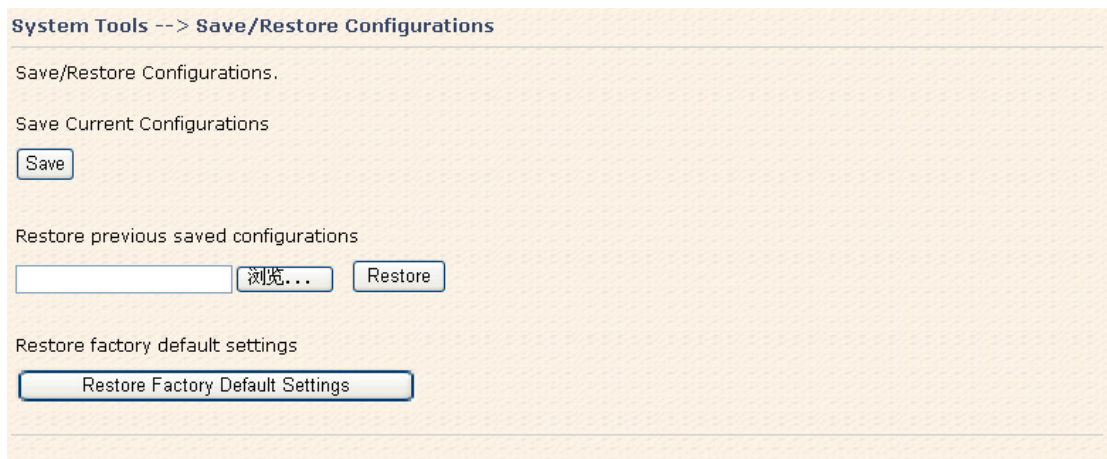

Save/Restore Configurations Screen

**Save:** The configuration file can be downloaded. (Internet Explorer user will need to click on the protection bar on top and click choose “download files”)

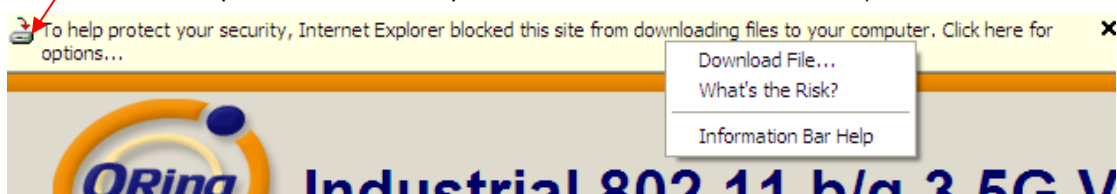

The following table describes the labels in this screen.

Label	Description
<b>Download configuration</b>	The current system settings can be saved as a file into your PC.
<b>Upload configuration</b>	The configuration can be restored to the router. To reload a system settings file, click on <b>Browse</b> to browse your local hard



	drive and locate the system settings file previously saved. Click <b>Upload</b> when you have selected the file.
<b>Restore Default Settings</b>	You may also reset the router to the factory settings by clicking on <b>Restore Default Settings</b> . The router will reboot to validate the default settings.

### Miscellaneous (Ping)

System Tools --> Miscellaneous

Miscellaneous utilities.

Ping Test:                      Destination:

Ping Test Result: \_\_\_\_\_

Miscellaneous Screen

The Ping Test is used to send Ping packets to test if a computer whether it is on the Internet or test if the WAN connection is OK. Enter a domain or IP in the destination box and click Ping to test.

## 5.3.4 System Status

### System Info

System Status --> System Info

System Info.

Model:	IAR-120+_US	
Model Description:	Industrial IEEE 802.11 b/g Cellular VPN Router with 2x10/100Base-T(X),1-port PoE P.D., US band	
WAN:	Mode	Dynamic Setting
	IP Address	192.168.2.151
	Broadcast Address	192.168.2.255
	Subnet Mask	255.255.255.0
	Default Gateway	192.168.2.1
	DNS(Primary)	192.168.2.6
	DNS(Secondary)	
	MTU	1500
	MAC Address	00:1E:94:33:22:45
LAN:	IP Address	192.168.10.1
	Subnet Mask	255.255.255.0
	MTU	1500
	MAC Address	00:1E:94:33:22:44
	DHCP Server	Enabled
Wireless:	Wireless	Enabled
	SSID	oring
	Channel	6
	Encryption Mode	None
	MAC Address	00:0E:8E:21:DF:C4

System Info Screen

This page displays the details information for the AP router including model name, model description, firmware version, WAN, LAN and wireless settings.

### System Log

System Status --> System Log

System log.

Log Option:

☐ DHCP Server  
☐ NTP Client  
☐ PPPoE Client  
☐ System Event  
☐ Firewall  
☐ Boot Message  
☐ PPTP VPN  
☐ OpenVpn  
☐ UPNP  
☐ Modem

System Log:

#	Date Time	Item	Content
---	-----------	------	---------

System Log Screen

The router keeps a running log of events and activities occurring on the router, several filters are provided for displaying related log entries.

Click the button '**Refresh**' to refresh the page.

Click the button '**Clear Logs**' to clear the log entries.

## Traffic Statistics

System Status --> Traffic Statistics

Traffic statistics.

Interface	Send	Receive
Wired LAN	42108845 Bytes (200861 Packages)	41739910 Bytes (247076 Packages)
Wired WAN	45114425 Bytes (246303 Packages)	45465241 Bytes (242149 Packages)
Wireless LAN	3653 Packages	71415 Packages

Refresh

Traffic Statistics Screen

This page displays the network traffic statistics for both received and transmitted packets through the Ethernet port and wireless connections.

## Wired/Wireless Clients

System Status --> Wired/Wireless Clients

Wired/Wireless Clients.

MAC Address	Lease IP Address	Communication Type
00:0c:29:e6:dc:a5	192.168.10.84	Wired

Refresh

Wired/Wireless Clients Screen

This page of the list displays the **Mac Address** and **Lease IP Address** of the wired/wireless clients connected. **Communication Type** shows the physical connection type of the client.

# Technical Specifications

<b>LAN Interface</b>	
RJ45 Ports	2 x 10/100Base-T(X), Auto MDI/MDI-X
Protection	Built-in 1.5KV magnetic isolation
Protocols	ICMP, IP, TCP, UDP, DHCP, BOOTP, ARP/RARP, DNS, SNMP MIB II, HTTPS, SSH, SNMPV1/V2, Trap, Private MIB
P.O.E. PD	Present at ETH2 of IAR-120+ Power Device (IEEE802.3af): IEEE 802.3af compliant input interface Power consumption: 8Watts max. Over load & short circuit protection Isolation Voltage: 1000 VDC min. Isolation Resistance: 10 <sup>8</sup> ohms min
<b>WLAN Interface</b>	
Antenna Connector	Reverse SMA
Radio Frequency Type	DSSS, OFDM
Modulation	IEEE802.11b: CCK, DQPSK, DBPSK IEEE802.11g: OFDM with BPSK, QPSK, 16QAM, 64QAM
Frequency Band	America/FCC: 2.412~2.462 GHz (11channels) Europe CE/ETSI: 2.412~2.472 GHz (13channels)
Transmission Rate	IEEE802.11b: 1/2/5.5/11 Mbps IEEE802.11g: 6/9/12/18/24/36/48/54 Mbps
Transmit Power	IEEE802.11b/g: 18dBm
Receiver Sensitivity	-81dBm@11Mbps, PER< 8%; -64dBm@54Mbps, PER< 10%
Encryption Security	WEP: (64-bit, 128-bit key supported) WPA/WPA2:802.11i (WEP and AES encryption) WPA-PSK (256-bit key pre-shared key supported) 802.1X and Radius supported TKIP encryption
Wireless Security	SSID broadcast disable
LED Indicators	PWR 1(2) (P.O.E., IAR-120+) / Ready: 1) Red On: Power is on and booting up.





	2) Green On: Power is on and functioning normally. ETH1 (2) Link / ACT: Orange ON/Blinking: 10 Mbps Ethernet Green ON/Blinking: 100 Mbps Ethernet WLAN Link/ACT: Green WLAN Strength: 1<25%, 2<50%, 3<75%, 4<100% Fault: Power or LAN link down (Red)
<b>Power Requirements</b>	
Power Input Voltage	PWR1/2: 12 ~ 48VDC in 6-pin Terminal Block
Reverse Polarity Protection	Present
Power Consumption	6 Watts (USB device not included)
<b>Environmental</b>	
Operating Temperature	-10 to 55°C
Storage Temperature	-40 to 85°C
Operating Humidity	5% to 95%, non-condensing
<b>Mechanical</b>	
Dimensions(W x D x H)	52 mm(W)x 106.1 mm( D )x 144.3 mm(H)
Casing	IP-30 protection
<b>Regulatory Approvals</b>	
Regulatory Approvals	FCC Part 15, CISPER (EN55022) class A
EMS	EN61000-4-2 (ESD), EN61000-4-3 (RS), EN61000-4-4 (EFT), EN61000-4-5 (Surge), EN61000-4-6 (CS)
Shock	IEC 60068-2-27
Free Fall	IEC 60068-2-32
Vibration	IEC 60068-2-6
<b>Warranty</b>	3 years